



Asus ROG G751JL-BB17T29 CD-ROM Player Replacement

This guide will show how to release the CD-ROM Player from the body of the computer and replace it.

Written By: Kyle Miller





TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — CD-ROM Player





- Lift rubber cover on the back of the laptop.
- Remove 5.2 mm screw with a Phillips screwdriver.

Step 2

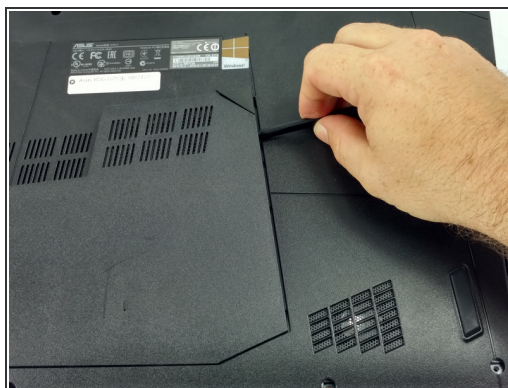

- Using the nylon spudger, remove the back center panel.

Step 3

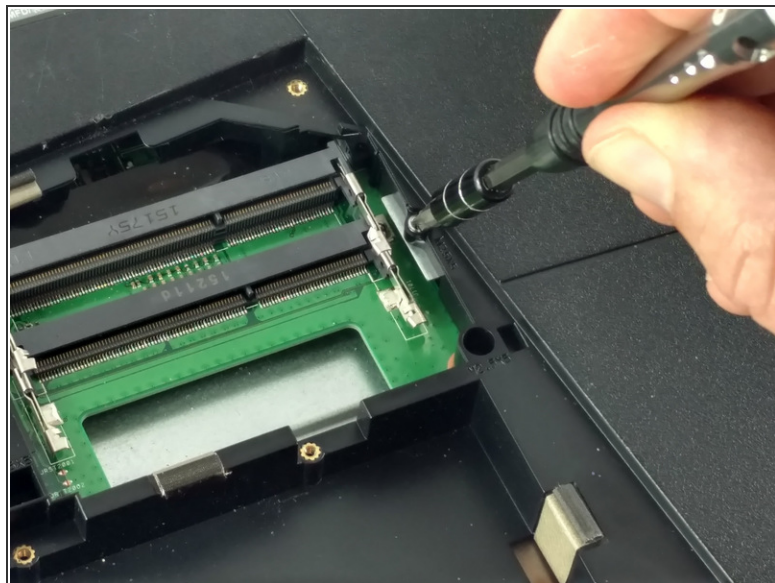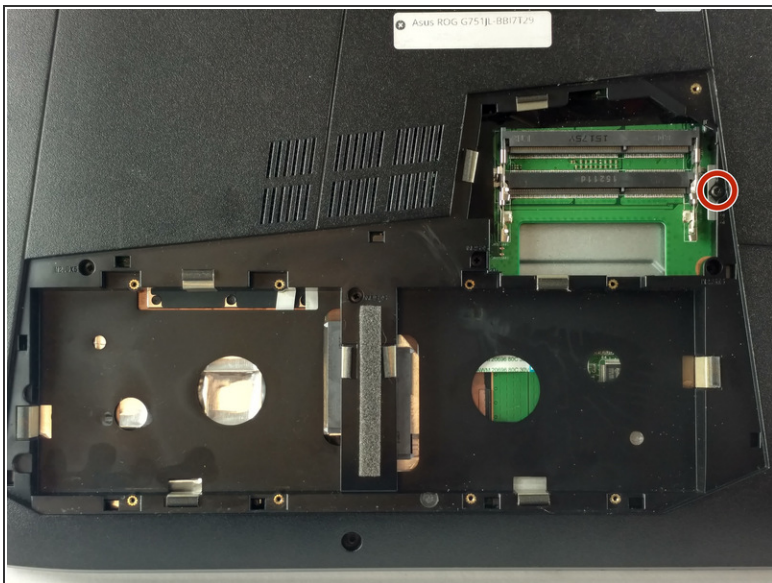

- Remove the 5 mm Phillips screw that is located underneath the back panel.

Step 4



- Pull out the optical drive located on the side of the laptop.

To reassemble your device, follow these instructions in reverse order.

